Kit Includes:
- 1– Plastic Storage Tub
- 1–Sump Pump
- 1-Catch Basin Cover Lifter
- 1-100 ft. Extension Cord
- 1-100 ft. Garden Hose
- 2-Orange Safety Cones
- 1– Electrical Surge Protector
- 2-Bungee Cords (1 large, 1 small)

INSTALLATION STEPS

Step 1) Attach Garden Hose to Sump Pump (at white adapter location). A "snug" fit will do... forcing it more than this may strip the adapter and cause it leak. NOTE: Attach the end with the swivel for easier turning.

Step 2) Plug Sump Pump Unit into the Extension Cord.

(Take special care to keep the connection dry by doing this in a dry area PRIOR to car washing activity).

Step 3) Plug Extension Hose into Yellow Surge Protector.

(Keep connection dry).

Step 4) Plug Yellow Surge Protector into your power outlet… make sure your power outlet has the minimum required voltage.

Step 5) *Place Orange Safety Cones as shown.*

Step 6) *Using the Catch Basin (CB) tool (or two strong individuals), slide the CB Cover to the side to get the Pump Assembly in the Catch Basin.*

Step 7) *Lower Complete Sump Pump Assembly into Catch Basin until it reaches the bottom, then recover with the grate. Be careful not to pinch the Pump Cord or Hose with the lid.*

Step 8) *Extend the hose that is attached to the sump pump to the designated grassy area or sanitary drain at your site location. (When the wash water fills up the pump will start pumping it out).*
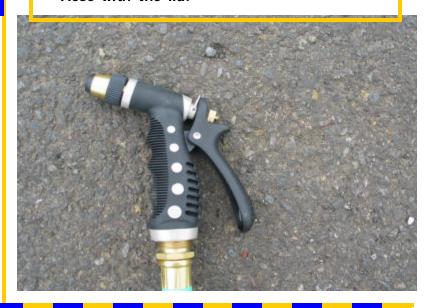
Step 9) *Please conserve by using the enclosed Spray Nozzle on the hose you will use on the cars*

Step 10) *When finished, rinse the buckets and sponges over a sink or grassy area.*

Putting the Kit away: *IMPORTANT!!!*

Step 9) *Unplug Surge Protector from Wall*

Step 10) *Unplug Extension Cord from Surge Protector*

Step 11) *Unplug Sump Pump from Extension Cord*

Step 12) *Remove Sump Pump Unit from CB and rinse it off…*

Step 13) *Please detach and roll up Hose and secure with Large Bungee…*

Step 14) *Roll up Extension Cord and secure with Small Bungee…*

Step 15) *Place all items back in Tub*

Nice Job Fish-Friendly Car Washer!!